

Instruction of Digital Temperature DT-2

- With LCD display shows temperature and humidity;
- Max min value memory;
- Time and the alarm clock.

This thermometer could be installed by

1. Stand on desktop by rack on back panel
2. Stick to wall by the hole
3. Stick to iron by the magnet on back panel.

Technical Data

Temperature Range:

In Temperature: -50°C to 70°C (-58.0°F to 150°F), sampling period 10s, Resolution 0.1°C, Accuracy ±1°C

Out Temperature: -50°C to 70°C (-58.0°F to 150°F), sampling period 10s, Resolution 0.1°C, Accuracy ±1°C

Humidity: 10% to 99%, sampling period 10s, Resolution 1%, Accuracy 3% (50%~80%),

Operation

1. How to know now is clock mode and How to set live-time?

The : between hour and minute flash every seconds, means now is clock mode;

Display will show the icon of alarming and Hourly Chime if both of them were set.

Assure now is clock mode before setting live time, Press the key "SET" of back panel and hold on 3s at least before release, then press the key "ADJ", now you can adjust time and date, the parameter sequence as follow:

Min-Hour-12/24-Month-Date (sorry without year),

Remember to press the key "ADJ" again once finished date setting, the screen show live time in 3s.

2. How to know now is clock mode and How to set clock alarm?

In clock mode, press the key "SET" of back panel and release at once, you will find the icon : freezing but not flash, now is Alarming mode.

Assure now is Alarming mode before setting alarm time, Press the key "SET" of back panel and release at once, you will "Min" flash, press the key "ADJ" to change the value;

after reach aim min, and Press the key "SET" of back panel and release at once, you will "Hour" flash,

press the key "ADJ" to change the hours, after reach aim hour, remember to press the key "set" to save data, after this the alarm function is running.

Tip: Press the key "ADJ" and hold on for 8s will enter rapid adjusting.

3. How to shut down the voice alarming and Hourly Chime?

Assure now is Alarming mode, then press the key "ADJ" to witch function, the sequence as follow.


Press "ADJ" 1 time, only Alarm running

Press "ADJ" 2 times, only Hourly Chime running

Press "ADJ" 3 times, both Alarm and Hourly Chime running

Press "ADJ" 4 times, both Alarm and Hourly Chime stop.

Moist	☺
Nice	☺
Dry	☹

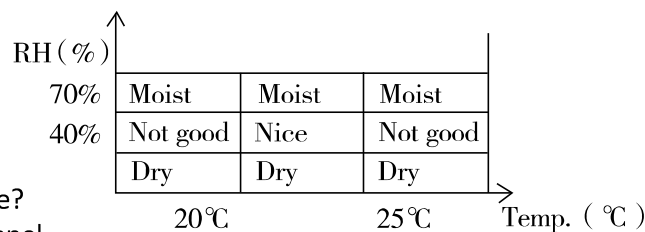

4. How to switch the in/out temperature?

Press the key "in/out" on the front panel.

5. How to see history Max/Min temperature?

Max Temperature: Press the key "Max" on front panel.

Min Temperature: Press the key "Min" on front panel.

Clear History: Press the key "Reset"; device will update max/min value from now on.