


# STC-8080H Thermostat

## Quick Start Guide

(Version 22.11.03GEN) [Video on YouTube](#)

STC-8080H defrosting thermostat with one sensor and two output relays to connect and control the refrigeration and the defrosting unit. There is an **editable** delay time for the over-temp alarm function.

### 1. Wiring Diagram

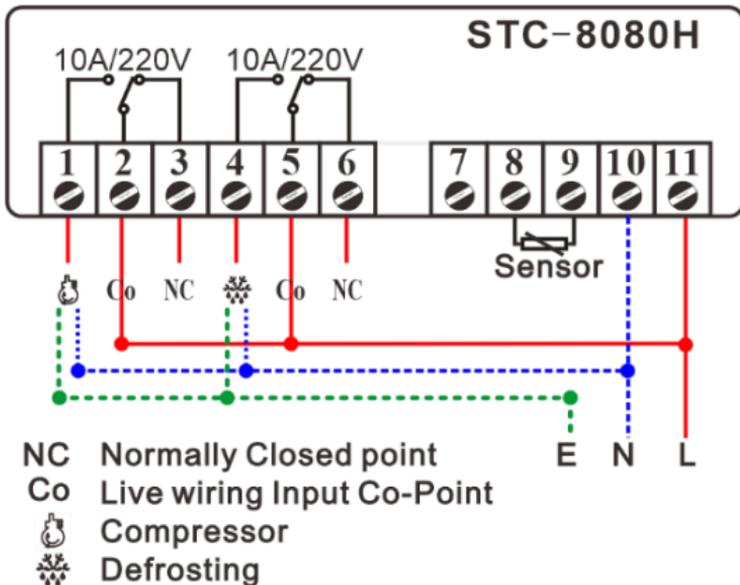

This unit does not output AC electricity; hence you have to wire all live and null wires to each port; you may use the jumper wire conveniently.

## 2. Function Menu

Code	Function
<i>F 1</i>	Temperature for Refrigeration Starts
<i>F 2</i>	Temperature for Refrigeration Stops
<i>F 3</i>	Temperature Calibration
<i>F 4</i>	Compressor Delay Time
<i>F 5</i>	Over-temperature to Trigger Alarm (more than <i>F 1</i> )
<i>F 6</i>	Alarm Delay Time
<i>F 7</i>	Defrosting Cycle / Interval Time
<i>F 8</i>	Defrosting Lasting Time

## 3. Configuration

The aimed temperature range was defined from “*F 1*” to “*F 2*”; you need to set both.

- $\geq F 1$ , refrigeration starts.
- $\leq F 2$ , refrigeration ends.

Step1 Hold the **Set** key for 3s, and the code *F 1* will appear.

Step2 Press the **▲** or **▼** keys to get the aim

function you want to update;

- Step3 Press the **Set** key to check the existing value;  
Hold the **Set** key meanwhile press the **▲** or **▼** key to change the value;
- Step4 Release all keys once it reaches your aim value;  
Repeat operation from Step 2 / 3 / 4 to adjust other parameters;
- Step5 After configuring all values, press the **Rst** key to save data and back to normal monitor status.  
Attention: the modified value will be saved automatically and back to normal status if without operation in 30 seconds.

## 4. Run the Forced Refrigeration

**Hold the ▼ key for 3s** to start the forced-defrosting mode; do it again to stop defrosting.

### More Tips:

This unit controls the defrosting only by the time, but not by the evaporator temperature like [STC-9100](#).

This is not a step-by-step user manual;  
It just shows the key points.

The new user should read the Full-Content Version User  
Manual



Haswill Electronics

[STC-8080H](#)

Copyright Haswill-Haswell All Rights Reserved